


South Milwaukee Fire Department  
Multi-Station SCBA Confidence Training Prop  
Set-up Instructions


- The prop is designed to be used with at least 100' of 1 $\frac{3}{4}$ " hose as a guide.

Place a bolt in this hole with the bolt head towards the inside of the framework – wing nut towards outside

Align the hole in the support with the hole in the framework and insert the bolt from the inside out.

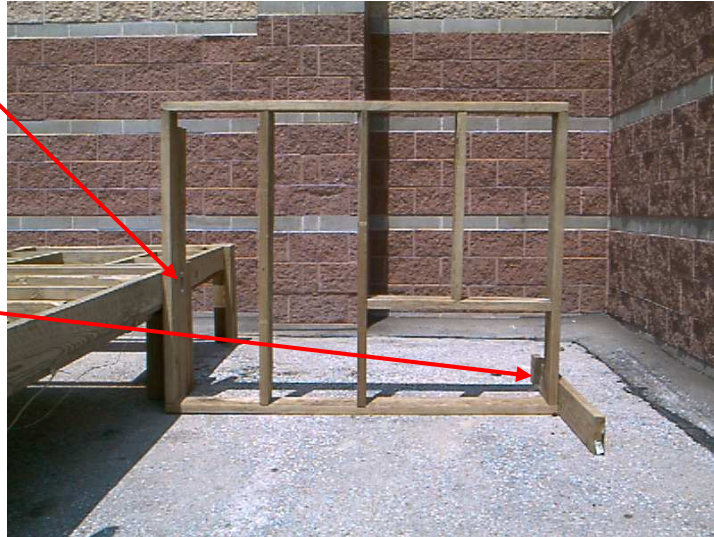

Place the attic scuttle simulator tight against the rafter crawl simulator – then slide the frame of the narrow passage tube in between the 2" x 6"s on the side of the rafter crawl prop

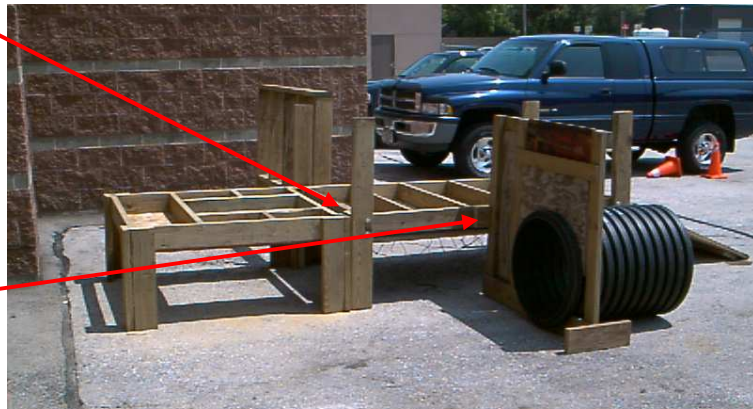

As a final step in the set-up, run an 1 $\frac{3}{4}$ " hose through the prop.

Recommended hose layout. Start with female coupling at beginning of attic scuttle prop and run hose up through opening.

Dotted lines indicate hose running underneath prop.

